


BA13a - Simple to Use

Easy Guide to your Bidet Remote Control

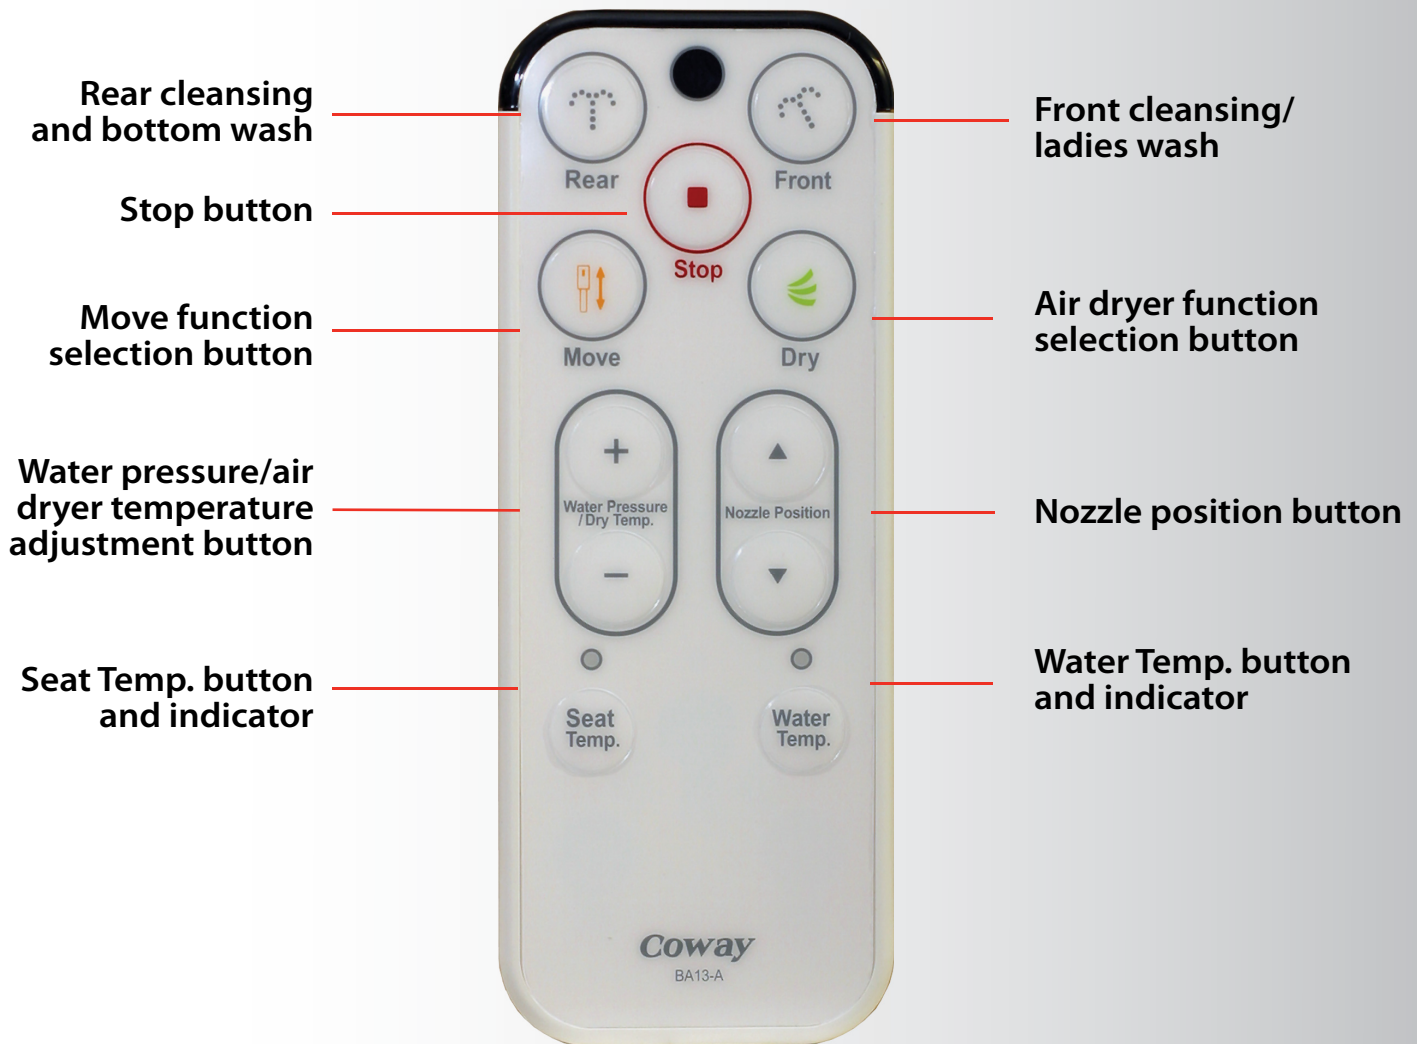

- To start off press the rear or front wash
- Adjust the nozzle position to suit your body or roll your body forward so the spray is directed to the right area
- When you're done, press the "Dry" button to finish off.
- If you're not completely dry, press the button again.

The[®]
BIDET
SHOP

FRECALL
1800 243 387

www.thebidetshop.com.au



BA13a - Remote Control Functions

Function Buttons Explained - What they can do for you

Rear cleansing and bottom wash -

Use this button for the rear cleansing function.

Stop button - All currently operating functions will stop.

Move function selection button - By pressing the 'Move' button while the rear cleansing/front cleansing function is operating, the nozzle will move forwards and backwards so you can clean a wider area.

Water pressure / air dryer temperature adjustment button - Controls the water pressure in 3 levels (Low-Medium-High) and controls the air dryer temperature in 4 levels (Low-Medium-High-Off) while the dryer is running.

Seat Temp. button indicator - You can control the seat temperature in 4 levels when the 'Water Temp.' button is pressed, the temperature control indicator cycles through the following order: L(Blue) > M(Pink) > H(Red) > Off (No colour).

Front cleansing / ladies wash -

Use this button to use the front cleansing front function for women.

Air dryer function selection button - Activates the warm air dryer.

Nozzle position button - You can move the nozzle forwards or backwards in 5 different positions during the rear cleansing/front cleansing operation.

Water Temp. button indicator - You can control the water temperature in 4 levels when the 'Water Temp.' button is pressed, the temperature control indicator cycles through the following order: L(Blue) > M(Pink) > H(Red) > Off (No colour).

